



NOTICE: VCC and GND cables have to be correctly dimensioned.
Cables like the ones that power the motors, have to be at least 22 AWG.
Cables like the ones in the main 20A buck converter input/output, have to be at least 14AWG.
Arm and head servo power connectors are not shown in this schematic. They go to 5V/6V (depending on model) and to GND.

